

FRUIT CAT

USER MENU

MAIN RATE	80¢ - 12¢ - 50¢ - 02¢
DOUBLE RATE	60¢ - 70¢ - 80¢ - 90¢
DOUBLE UP	YES - NO
DOUBLE PANDA RATE	60¢ - 70¢ - 80¢ - 90¢
DEMO SOUND	YES - NO
MUSIC	TRADITIONAL - TECHING
AUTO STOP	FAST - NORMAL
REEL SPEED	SLOW - FAST
RESET	DOUBLE KEY
KEYBOARD	76 KEY
COIN-IN	1 - 2 - 4 - 7 - 10 - 12 - 15 - 20 - 22 - 30 - 40 - 50 - 60 - 72 - 80 - 100 - 200 - 250 - 400 - 500 - 700 - 1000
TICKET-OUT	1 - 2 - 4 - 7 - 10 - 12 - 15 - 20 - 22 - 30 - 40 - 50 - 60 - 72 - 80 - 100 - 200 - 250 - 400 - 500 - 700 - 1000
KEY-IN	1 - 2 - 4 - 7 - 10 - 12 - 15 - 20 - 22 - 30 - 40 - 50 - 60 - 72 - 80 - 100 - 200 - 250 - 400 - 500 - 700 - 1000
KEY-OUT	1 - 2 - 4 - 7 - 10 - 12 - 15 - 20 - 22 - 30 - 40 - 50 - 60 - 72 - 80 - 100 - 200 - 250 - 400 - 500 - 700 - 1000
(TICKET/KEY) OUT LIMIT	1000 - 500 - 10000 - 50000 - LIMITLESS
BIG PRIZ AUTO TICKET OUT	YES - NO
MAX PLAY	3 - 10 - 15 - 20 - 25 - 30 - 40 - 50 - 60 - 70 - 80 - 120 - 150
MIN PLAY	1 - 2 - 5 - 10 - 15 - 20 - 25 - 30 - 40 - 50 - 60 - 70 - 80 - 120 - 150
DISPLAY ODDS TABLE	YES - NO
REEL MODE	YES - NO

PRESS TEST BUTTON AND POWER ON, ENTER SYSTEM SET

"BIG" BUTTON : ITEM UP
 "SMALL" BUTTON : ITEM DOWN
 "DOUBLE" BUTTON : CHANGE SET
 "PLAY" BUTTON : CHANGE SET
 "TEST" BUTTON : NEXT PAGE
 "START" BUTTON : QUIT

MAIN RATE	80% , 85% , 90% , 95%
DOUBLE RATE	60% , 70% , 80% , 90%
DOUBLE UP	YES , NO
DOUBLE PANDA RATE	60% , 70% , 80% , 90%
DEMO SOUND	YES , NO
MUSIC	TRADITIONAL , TECHNO
AUTO STOP	FAST , NORMAL
REEL SPEED	SLOW , FAST
RESET	DOUBLE KEY
KEYBOARD	36 KEY
COIN-IN	1 , 2 , 4 , 5 , 10 , 15 , 20 , 25 , 30 , 40 , 50 , 60 , 75 , 80 , 100 , 200 , 250 , 400 , 500 , 1000
TICKET-OUT	1 , 2 , 4 , 5 , 10 , 15 , 20 , 25 , 30 , 40 , 50 , 60 , 75 , 80 , 100 , 200 , 250 , 400 , 500 , 1000
KEY-IN	1 , 2 , 4 , 5 , 10 , 15 , 20 , 25 , 30 , 40 , 50 , 60 , 75 , 80 , 100 , 200 , 250 , 400 , 500 , 1000
KEY-OUT (TICKET/KEY) OUT LIMIT	1 , 2 , 4 , 5 , 10 , 15 , 20 , 25 , 30 , 40 , 50 , 60 , 75 , 80 , 100 , 200 , 250 , 400 , 500 , 1000 1000 , 5000 , 10000 , 90000 , UNLIMITED
BIG PRIX AUTO TICKET OUT	YES , NO
MAX PLAY	8 , 10 , 16 , 24 , 32 , 40 , 48 , 64 , 80 , 128 , 156
MIN. PLAY	1 , 8 , 16 , 24 , 32 , 40 , 48 , 50 , 64 , 80 , 128
DISPLAY ODDS TABLE	YES , NO
SKILL MODE	YES , NO

- MAXIMAL PLAY: 156
- COMPASS FIGURE CAN BE ANY FIGURE .
- CHERRY BONUS :
 - N LINE CHERRY, N TIMES FREERUN .
 - + FIGURE CHERRY, CAN DRAW BONUS AND TEN TIMES FREERUN .
- + FIGURE UFO, CAN DRAW JACKPOT BONUS, THE BONUS DEPENDS ON THE BET BELOW .

CROSS FIGURE JACKPOT BONUS					
PLAY	8 ~ 15	16 ~ 31	32 ~ 63	64 ~ 119	120 ~ 156
BONUS	3000	8000	15000	30000	50000

- + FIGURE BONUS :
+ FIGURE, CAN DRAW SUB-GAME, THE SUB-GAME DEPENDS ON THE FIGURE BELOW .

FREE AUXILIARY GAME		
COMPASS	SUB-GAME3	PLAY FIVE TIMES EVERY SUB-GAME
CROWN		
UFO		
RED-7		
BLUE-7		
RED-BAR	SUB-GAME2	
GREEN-BAR		
BLUE-BAR	SUB-GAME1	
WATEMELON		
MANGO		
ORANGE		

SUB-GAME 1
PIRATE VS . BAYONET
ALL PLAY X 10



SUB-GAME 2
SALVAGE PANDA
ALL PLAY X 20



SUB-GAME 3
KING MOUSE
ALL PLAY X 30



- BELL FIGURE CROSS BONUS :
+ BELLS FIGURE,CAN DRAW BONUS AND FREERUN FIVE TIMES .
- LOST :
 - ONLY COMPASS OR ONLY CROWN IN NINE LATTICE WINDOWS.PLAY FREERUN ONE TIMES .
 - PURPLE WINDOWS,PRESS TAKE BUTTON,FIGURE DOWN MOVE FIVE LATTICE .
 - PRESS TAKE BUTTON CAN HOLD WINDOWS.RAISE WIN AN OPPORTUNITY .
- ALL SAME BONUS :
(1)ALL SAME FIGURE, CAN DRAW BNOUS,DEPENDS ON THE PLAY BELOW .

ALL SAME BONUS					
PLAY	8 ~ 15	16 ~ 31	32 ~ 63	64 ~ 119	120 ~ 156
BONUS	2500	5000	10000	20000	30000

- LGT BONUS :
(1) ONLY ALL SAME FIGURE.PLAY GAME IN LEFT WINDOWS . IF ONLY ONE SAME IN LEFT WINDOWS, CAN DRAW LGT BONUS . LGT BONUS AND PLAY BELOW .

LGT BONUS				
PLAY	8 ~ 16	17 ~ 32	33 ~ 64	65 ~ 156
One Same	500	1000	2000	3000
Two Same	1000	2000	5000	10000
Three Same	5000	10000	20000	30000

OPERATION INSTRUCTION

1. ACCOUNT SW : WHEN POWER-ON, PRESS ACCOUNT BUTTON YOU CAN CHECK ACCOUNT RECORD . PRESS START BUTTON CAN QUIT, LAST ITEM IS PRESENT ACCOUNT, IF YOU PRESS TAKE BUTTON CAN PRESENT ACCOUNT RESET TO ZERO .
2. TEST SW : PRESS TEST BUTTON AND POWER-ON, CAN ENTER SYSTEM SET . PRESS DOUBLE BUTTON OR PLAY BUTTON: CHANGE SET . PRESS BIG BUTTON OR SMALL: UP OR DOWN . PRESS TEST BUTTON: NEXT PAGE .
3. RESET : PRESS TEST BUTTON AND POWER-ON, MOVE FINGER TO RESET, PRESS DOUBLE BUTTON, MONITOR SHOW MESSAGE "<YES> PUSH [DOUBLE] , <NO> PUSH [BIG OR SMALL]" , PRESS BIG BUTTON OR SMALL BUTTON: NO RESET, PRESS DOUBLE BUTTON: SYSTEM RESET TO ZERO .

CAUTION ITEMS :

1. DON'T OFTEN SYSTEM RESET .
2. INTO DOUBLE GAME :
PRESS BET BUTTON CHANGE $\times 1/2$ or $\times 1$ or $\times 2$.
3. CHECK BONUS LIST, PRESS SMALL BUTTON .

CONNECTOR : (36PIN)

EDGE CONNECTOR 72pin		
COMPONENT SIDE		SOLDERS SIDE
VIDEO RED	1	VIDO GREEN
VIDO BLUE	2	VIDO S Y N C
SPEAKER	3	SPEAKER GND
	4	
	5	
	6	
TICKET OUT BOTTON	7	
TICKET NOTCH	8	
START	9	
SMALL/STOP2	10	
PLAY	11	
TAKE/HOLD/STOP3	12	
DOUBLE UP/STOP1	13	
	14	
	15	
BIG/ALL STOP	16	
	17	
COIN-IN	18	KEY-IN
	19	
ACCOUNT	20	TEST
	21	KEY-OUT
	22	
COIN-IN METER	23	
KEY-IN METER	24	
	25	
	26	
	27	
KEY-OUT/PAY OUT METER	28	
	29	START LAMP
	30	SMALL/STOP2 LAMP
	31	PLAY LAMP
	32	TAKE/HOLD/STOP3 LAMP
	33	
DOUBLE/STOPI LAMP	34	
BIG/ALL STOP LAMP	35	
GND	36	GND

CONNECTOR : (10PIN)

COMPONENT SIDE		SOLDERS SIDE
GND	1	GND
GND	2	GND
+ 5V	3	+ 5V
+ 5V	4	+ 5V
+12V	5	+12V

COMPONENT SIDE		SOLDERS SIDE
	6	
HP-IN(SSR)	7	
	8	
GND	9	GND
GND	10	GND