

Fruit Paradise

V. 211US

1. DIP SWITCH SETTING

DIP SWITCH 1		1	2	3	4	5	6	7	8
DEMO MUSIC	YES	OFF							
	NO	ON							
NON STOP	NO		OFF						
	YES		ON						
PASSWORD	YES			OFF					
	NO			ON					
ODDS TABLE	YES				OFF				
	NO				ON				
AUTO TAKE (W-UP DISSABLE)	NO					OFF			
	YES					ON			
W-UP GAME	YES						OFF		
	NO						ON		
W-UP PLAY	POKER 1							OFF	OFF
	POKER 2							ON	OFF
	SYMBOL							OFF	ON

DIP SWITCH 2		1	2	3	4	5	6	7	8
CHANCE LEVEL	LOW	OFF							
	HIGH	ON							
SCORE BOX	NO		OFF	OFF					
	YES		ON	ON					
	10 TIMES		ON	ON					
PLAY SCORE	NO				OFF				
	YES				ON				

Remark: for normal operation please set Chance Level on OFF (low) & ON (high) for Casino

2. System Setup (Push "RECORD" Key to select the following items)

CONTENTS	SETTING SELECTION	DEFAULT
MAX. PLAY	8, 16, 24, 32, 40, 48, 64, 80, 128, 256	64
MIN. PLAY	1, 8, 16, 24, 32, 40, 48, 50, 64, 80, 128	8
SYSTEM LIMIT (Max. PLAY)	500, 1000, 2000, 3000, NO	NO
COIN		5
KEY IN RATE	1, 2, 4, 5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 80, 100,	100
KEY OUT RATE	200, 250, 400, 500, 1000	1
TICKET RATE		20
GAME TICKET	1, 2, 3, 4, 5, 8, 10, CONTINUOUS	CONTINUOUS
CREDIT LIMIT	1000, 5000, 10000, 90000	10.000
HAND COUNT	YES, NO	NO
MAIN GAME RATE	60%, 65%, 70%, 75%, 80%, 85%, 90%, 95%	80%
W-UP GAME RATE	60%, 70%, 80%, 90%	80%

Connection Diagram for 36+10 Pins

PARTS SIDE		SOLDER SIDE
VIDEO RED	1	VIDEO GREEN
VIDEO BLUE	2	VIDEO SYNC
SPEAKER	3	VIDEO GND
	4	
	5	
	6	
TICKET OUT	7	
TICKET SWITCH	8	
START	9	
SMALL / STOP2	10	
PLAY	11	
TAKE / STOP3	12	
W-UP / STOP1	13	
	14	
	15	
BIG / ALL STOP	16	
	17	
COIN A	18	KEY IN
	19	COIN C
BOOK	20	TEST
	21	KEY OUT
	22	
COIN A METER	23	
KEY IN METER	24	
	25	
COIN C METER	26	GAME COUNT SIGNAL
	27	
OUT METER	28	
LAMP: START	29	
LAMP: SMALL / STOP2	30	
LAMP: PLAY	31	
LAMP: TAKE / STOP3	32	
LAMP: W-UP / STOP1	33	
LAMP: BIG / ALL STOP	34	
ATTENDANT	35	
GND	36	GND

PARTS SIDE		SOLDER SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
+12V	6	+12V
TICKET SSR	7	
	8	
	9	
GND	10	GND

BIG
ALL STOP

STOP 1
W-UP

STOP2
SMALL

STOP3
TAKE

PLAY

START