


Mars Fortune

(Manual Version : MF_USA_060807)


Table of Contents

Interface & Button Layout	p. 04
Information	p. 05
Data Setting	p. 06
Bookkeeping	p. 09
Shift Record	p. 14
I/O Test	p. 15
History	p. 16
How to Play – Main Game	p. 17
How to Play – Free Game	p. 18
How to Play – Laser Gun	p. 19
How to Play – Jackpot	p. 20
How to Play – Double Up	p. 21
Bonus Game –Power Collection	p. 23
Bonus Game –Mineral Factory	p. 25
Bonus Game –Mineral Merchandise	p. 27
Skill Mode	p. 29
Troubleshooting	p. 31
Button Lamp List – Error Condition	p. 32
Pay Table	p. 33
Data Setting List	p. 34
Special Note	p. 36
Pin Layout	p. 37

 Interface

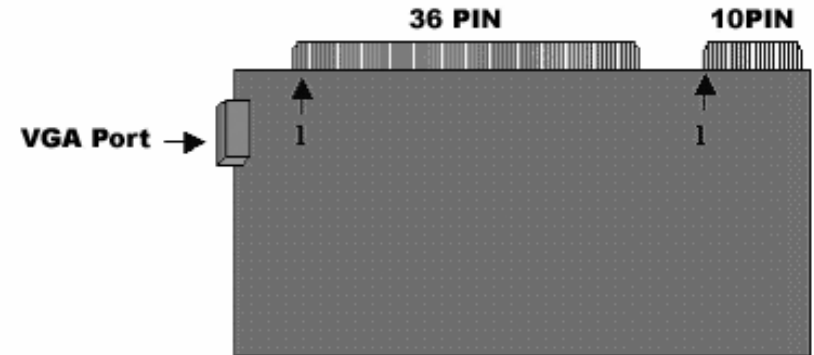

Button Layout

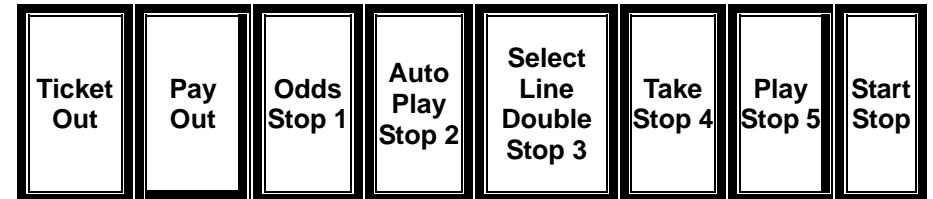 

According to Pin Layout.....p. 34

Information

 
1. Turn on **Account** switch to enter the **Setup Menu** page.



2. Select **Information** and press **Start** button to enter the **Information** page.
3. Press **Take** button to exit the **Information** page.



Data Setting

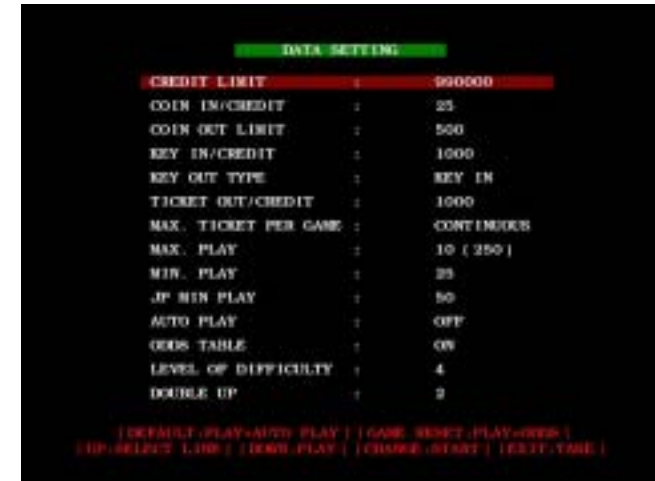

1. Turn on **Account** switch to enter the **Setup Menu** page.
2. Select **Data Setting** and press **Start** button to enter the **Data Setting** page.
3. Press **Play** and **Auto Play** buttons to restore the factory setting and the data will return to default.
4. Press **Play** and **Odds** buttons to reset the bookkeeping data &

history , the settings won't be changed.

5. Press **Select Line** or **Play** button to select the item.
6. Press **Start** button to change the value.
7. Press **Take** button to exit the **Data Setting** page



1. Press **Select Line** button to select the item for changing.
2. Press **Start** button to enter your decision.
3. If you decide not to reset, it will return to **Data Setting** page ; if you decide to reset, it will return to **Demo**.

(The program will once again reconfirm reset instruction)

Bookkeeping



BOOKKEEPING

TOTAL KEY	IN :	0 (UNIT:1000)
TOTAL COIN	IN :	0 (UNIT:25)
TOTAL KEY	OUT :	0 (UNIT:1000)
TOTAL PAY	OUT :	0 (UNIT:25)
TOTAL TICKET	OUT :	0 (UNIT:1000)
KEY OUT REMAINDER	:	0
CREDIT	:	0
SCORE	:	0
TOTAL PROFIT	:	0
PAY OUT	RATE :	0.0 %

(NEXT PAGE:SELECT LINE) (PREV PAGE:PLAY) (EXIT:TAKE)

Bookkeeping page 1/10

1. Turn on **Account** switch to enter the **Setup Menu** page.
2. Select **Bookkeeping** and press **Start** button to enter the **Bookkeeping** page.
3. Press **Select Line** or **Play** button to select the page.
Press **Take** button to exit the **Bookkeeping** page.



BOOKKEEPING

TOTAL PLAY TIMES	:	0
TOTAL WIN TIMES	:	0
HIT FREQUENCY	:	0.0 %
MAIN GAME	IN :	0
MAIN GAME	OUT :	0
MAIN GAME	RATE :	0.0 %
FREE GAME	TIMES :	0
FREE GAME	OUT :	0

(NEXT PAGE:SELECT LINE) (PREV PAGE:PLAY) (EXIT:TAKE)

Bookkeeping page 2/10



BOOKKEEPING

JP1	TIMES :	0
JP2	TIMES :	0
JP3	TIMES :	0
JP1	OUT :	0
JP2	OUT :	0
JP3	OUT :	0

(NEXT PAGE:SELECT LINE) (PREV PAGE:PLAY) (EXIT:TAKE)

Bookkeeping page 3/10



Bookkeeping page 4/10



Bookkeeping page 6/10



Bookkeeping page 5/10



Bookkeeping page 7/10

Shift Record



Bookkeeping page 8/10



Bookkeeping page 10/10



Bookkeeping page 9/10

1. Press **Start** and **Auto Play** buttons to shift.
2. Press **Select Line** or **Play** button to select the page.
3. Press **Take** button to exit the **Bookkeeping** page.

I/O Test



1. Turn on **Account** switch to enter the **Setup Menu** page.
2. Select **I/O Test** and press **Start** button to enter the **I/O Test** page.
3. Press **Take** button 2 seconds to exit the **I/O Test** page.

History



1. Turn on **Account** switch to enter the **Setup Menu** page.
2. Select **History** and press **Start** button to enter the **History** page.
3. Press **Select Line** or **Play** button to select the page.
4. Press **Take** button to exit the **History** page.

How to play

A. Main Game



15 reels-25 liner style



Pay Chart

B. Free Game



The game will randomly give away **6~10 rounds** of free games.



C. Laser Gun



Occasionally, the “Laser Gun” will shift symbols to increase the winning opportunity.

EX :



D. Jackpot



1. JP1 : (Random JP)

When player's play as JP MIN. Play and hit more than 3 **Spaceman** symbols, they will be awarded the JP1 Bonus. JP1 is a random bonus ranging from **550~650** times of Total Play.






2. JP2 : (Random JP)

When player's play as JP MIN. Play and hit more than 3 **Space Shuttle** symbols, they will be awarded the JP2 Bonus. JP2 is a random bonus ranging from **350~450** times of Total Play.



3. JP3 : (Random JP)

When player's play as JP MIN. Play and hit more than 3 **Martian** symbols, they will be awarded the JP3 Bonus. JP3 is a random bonus ranging from **150~250** times of Total Play.

Symbol \ Of a kind			
3	1/4 JP1	1/4 JP2	1/4 JP3
4	1/2 JP1	1/2 JP2	1/2 JP3
5	JP1	JP2	JP3

E. Double Up

1. After winning in the main game, players may press DOUBLE button to play the Double Up game.



2. The Double Up game can be played for maximum of 5 times.



3. Enemy UFO splits into two, one real and one fake. Select the real UFO and press DOUBLE button to attack.

4. When you hit the fake UFO, the real one will flee away, and you lose the Double Up game.



5. If hit the real UFO will cause it to damage, and your winning will be doubled. Continuously hit the UFO 5 times will cause it to crash, and you will get another extra bonus.



6. Before the beginning of each round, player may press TAKE button to claim current winning and exit the Double Up game.

BONUS GAME

A. Power Collection

1. Hit 3 Mars Medal symbols in the main game will trigger the Power Collection bonus game.



2. The time limit of Power Collection bonus game is 30 seconds. The game is over when the time is up, and then will count game score.



3. There are 6 energy towers in the power plant, light up like roulette, press STOP button to start collect energy.

4. If the player stop at a tower hasn't been chosen before, the plant will collect energy again with all chosen towers.



5. If the player stop at a tower has been chosen before will cause the tower to overact and explode. The game will be over.



6. Winning = Total Play x Game Score.

B. Mineral Factory

1. Hit 4 Mars Medal symbols in the main game will trigger the Mineral Factory bonus game.



2. The time limit of Mineral Factory bonus game is 30 seconds. The game is over when the time is up, and then will count game score.



3. The product line will send out 3 minerals each round, select one and press START button to cut.

4. If a gem inside, the gem will convert to odds. If an energy ore inside, the laser cutter's energy will be refilled.



5. If the player can't get an energy ore in consecutive 3 rounds, or if a booby trap inside, the game will be over.



6. Winning = Total Play x Game Score.

C. Mineral Merchandise

1. Hit 5 Mars Medal symbols in the main game will trigger the Mineral Merchandise bonus game.



2. The time limit of Mineral Merchandise bonus game is 30 seconds. The game is over when the time is up, and then will count game score.



3. The credit brought in to buy the mineral equal to the player's total play. In the beginning the player can only offer some minerals, press START button to buy one.
4. The chosen mineral will be sent to cut and the gem inside

will convert to credit and return to account.



5. Game will be over if the player can't offer any mineral or there is no mineral on the shelf.



6. Winning = Total Play + Profit. And the player may press TAKE button to claim current winning at anytime.

SKILL MODE

- A. Enter Data Setting page and turn on 「SKILL MODE」.
- B. A frame appears on a reel after press START button to stop the reels in a main game.



- C. Press **Odds** button to move the position of frame and determine which reel will be reserved. Only one reel will be reserved.



- D. Press START button again to respin the other four reels.



- E. Game result appears after the reels stop.



Troubleshooting

If the program detects an error, the corresponding message will be shown on the screen, please find the troubleshooting method as following.

Error Message	Procedure
Compact Flash Error	The version of program is incorrect Please talk to your provider.
Coin Jam	1. Repair the coin selector and coin entrance. 2. Enter and exit the "Data Setting" page.
Credit Over	Press Key Out, Payout, or Ticket Out.
Data Error	Enter the "Data Setting" page and reset the bookkeeping data.
HOPPER ERROR	1. Repair the coin out transporter or hopper. 2. Enter the "Data Setting" page and change the setting of HOPPER SENSOR to NORMAL HIGH or NORMAL LOW. 3. Exit the "Data Setting" page.
Hopper Empty	Refill the coin hopper.
Transfer Error	Restart the machine.
Hardware Error	1. Restart the machine. 2. If no effect, please contact provider.
Up Board Error	Please contact the provider.
No Image	1. When the opening animation starts, press Account button to enter the "Setup Menu" Page. 2. Select the item for more information.

Button Lamp List – Error Condition

Error Message	Procedure
Before Start The Game	The Tower Lamp and Button Lamps flash one by one.
After Start The Game	The Tower Lamp flash Alternately.
RAM ERROR	The Error Tower Lamp and 2 Button Lamps flash Alternately.
EEPROM ERROR	The Error Tower Lamp and 3 Button Lamps flash Alternately.
ROM ERROR	The Error Tower Lamp and 4 Button Lamps flash Alternately.
CRASH	The Error Tower Lamp and 5 Button Lamps flash Alternately.

Pay Table

The screenshot shows the 'ASTRO' slot machine pay table. The title 'ASTRO' is at the top in a glowing green font. Below it, the title 'Pay table' is centered. The main grid shows symbols and their corresponding payouts. The grid is as follows:

SYMBOL	1	2	3	4	5	6	7	8	9	10
ROCKET	x3	2	2	5	5	10	10	30	50	
PLANET	x4	5	5	10	10	10	10	50	100	
CHARACTER	x5	20	20	50	50	150	250	500	1000	
ALL OF A KIND	30	50	100	150	300	500	1000	1000	1000	1000

Below the grid, there are sections for 'ENTER BONUS GAMES' and 'NEXT ODDS'. The 'NEXT ODDS' section shows 'ODDS' and 'START' buttons. At the bottom, there are physical buttons for 'CREDIT', 'SCORE', 'SELECT', 'PLAY/SPIN', and 'TOTAL PLAY'. The 'CREDIT' button shows '1000', 'SCORE' shows '0', 'SELECT' shows '0', 'PLAY/SPIN' shows '0', and 'TOTAL PLAY' shows '0'.

Data Setting List

	Entry	Value
1	Credit Limit	1000, 3000, 5000, 10000, 20000 , 50000, 100000, 990000
2	Coin In/Credit	1, 2, 3, 4, 5, 10, 15, 20, 25 , 30, 40, 50, 60, 75, 80, 100, 200, 250, 400, 500, 1000
3	Coin Out Limit	100, 200, 300, 500 , 1000, 2000, 3000, 5000, 10000
4	Key In/Credit	1, 2, 3, 4, 5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 80, 100, 200, 250, 400, 500, 1000
5	Key Out Type	Key In , Coin In, Clear All
6	Ticket Out/Credit	1, 2, 3, 4, 5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 80, 100, 200, 250, 400, 500, 1000
7	Max. Ticket Per Game	Continuous , 1, 2, 3, 4, 5, 8, 10
8	Max. Play	25, 50, 75, 100, 125, 150, 175, 200, 225, 250 , 275, 300, 375, 500
9	Min. Play	1, 3,5, 7, 9, 10, 15, 20, 25 , 50, 75, 100, 150, 200, 250, 300, 500
10	JP Min. Play	25 , 50, 75, 100, 150, 200, 250, 300, 500
11	Auto Play	On , Off
12	ODDS Table	On , Off
13	Level Of Difficulty	1 EASIEST, 2, 3, 4 , 5, 6, 7, 8 HARDEST
14	Double Up	Off, 1 EASIEST, 2 , 3, 4, 5 HARDES
15	Winning Type	Into Score , Into Credit
16	Play Score	No, YES
17	Bookkeeping	On , Off
18	Skill mode	On, Off
19	Reset Code Type	Table1, Table2, Table3, Table4, Table5, Table6, Table7, Off
20	Game Count	On, Off
21	10 Time Feature	On, Off
22	Continuous Spin	On, Off

23	Demo Sound	On, Off
24	Sound Volume	0, 5, 10, 15, 20, 25, 30, 35, 40, 45, 50 , 55, 60, 65, 70, 75, 80, 85, 90, 95, 100
25	Play Mode	Reels, Flying
26	Hopper Sensor	Normal High, Normal Low

Special Note

Reset Code Type(Data Setting 19th item): "PASSAGE" page will show on the screen when the 19th item was be changed.



1. Press **Select Line** button to select the unit for changing.
2. Press **Play** button to change the value.
3. Press **Start** button to input the password. If the password is correct, then will enter **Data Setting** page; or will show PASSWORD ERROR.
4. Press **Take** button to exit the **Input Password** page, then will return to **Setup Menu** page.

You can see one unit of password while you're inputting , after you change ,the former unit will show as *.

Table	1	2	3	4	5	6	7
Password	658224	441578	956334	758452	458912	548814	198427

Pin Layout

CONNECTOR (36PIN)

PARTS SIDE		SOLDER SIDE
	1	
	2	
Speaker R +	3	Speaker R -
Speaker L +	4	Speaker L -
	5	
	6	
Ticket Out Button	7	
Ticket Notch(Dispenser)	8	
Start / Stop Button	9	
Odds/Stop1Button	10	
Play/Stop5 Button	11	
Take/Stop4 Button	12	
Select Line Double/ Stop 3 Button	13	
START SIGNAL	14	
	15	
Auto/Stop2 Button	16	
	17	
Coin In Switch	18	Key In Switch
Door Switch	19	
Account 1	20	Account 2
Pay Out Button	21	Key Out Switch
	22	Hopper Switch
Coin In Meter	23	
Key In Meter	24	Hopper SSR
	25	
	26	
Pay Out Meter	27	
Key Out Meter	28	
Start / Stop Lamp	29	Ticket Out SSR
Odds/Stop1 Lamp	30	Error Lamp
Play/Stop5 Lamp	31	Win Lamp
Take/Stop4 Lamp	32	
Select Line/ Double/Stop3 Lamp	33	
Auto/Stop2 Lamp	34	
	35	
GND	36	GND

CONNECTOR (10PIN)

PARTS SIDE		SOLDER SIDE
GND	1	GND
GND	2	GND
(*1) +5V	3	+5V
+5V	4	+5V
(*1) +12V	5	+12V
+12V	6	+12V
Ticket Dispenser Enable	7	
(*2) Hopper SSR	8	
GND	9	GND
GND	10	GND

(*1) DC +5V 2A and DC +12V

(*2) This pin is connected with the solder side 24th of connector 36 pin.

