

MAGICAL JACK Plus (USA) V7.XX

SW 1		1	2	3	4	5	6	7	8	
Main Game Rate	90%	Off	Off	Off						
	85%	Off	Off	On						
	80%	Off	On	Off						
	75%	Off	On	On						
	70%	On	Off	Off						
	65%	On	Off	On						
	60%	On	On	Off						
	55%	On	On	On						
Min. Play To Start The Game	1				Off	Off				
	8				Off	On				
	16				On	Off				
	32				On	On				
Max. Play	16						Off	Off		
	32						Off	On		
	64						On	Off		
	96						On	On		
10 Time Feature	Yes								Off	
	No								On	

SW 2		1	2	3	4	5	6	7	8
Coin In Setting	1	Off	Off	Off					
	2	Off	Off	On					
	5	Off	On	Off					
	10	Off	On	On					
	20	On	Off	Off					
	25	On	Off	On					
	50	On	On	Off					
	100	On	On	On					
Key In Setting	1				Off	Off	Off		
	4				Off	Off	On		
	5				Off	On	Off		
	15				Off	On	On		
	25				On	Off	Off		
	75				On	Off	On		
	100				On	On	Off		
	500				On	On	On		
Pay out Setting (Ticket)	Fixed	10 Credit 1 Ticket						Off	Off
		20 Credit 1 Ticket						Off	On
		50 Credit 1 Ticket						On	Off
	Adjustable	(SW 2 No. 4 – 6)						On	On

Magical Jack Plus (USA) V7.XX

SW 3		1	2	3	4	5	6	7	8
Game Limit	10000	Off	Off						
	50000	Off	On						
	100000	On	Off						
	200000	On	On						
Credit Limit	5000			Off					
	10000			On					
Display Rate Table	Yes				Off				
	No				On				
Reel Auto Stop	Yes					Off			
	No					On			
Game Count Mode	Normal						Off		
	Count						On		
Reel Speed	Slow							Off	
	Fast							On	
Min.Play For Fever	8								Off
	16								On

SW 4		1	2	3	4	5	6	7	8
Double – Up Rate	85%	Off							
	75%	On							
Play Score	Yes		Off						
	No		On						
Pay-Out Mode (Ticket)	Manual			Off					
	Auto			On					
Double-Up	Yes				Off				
	No				On				
Strip Girl Available	fruit					Off			
	Girl					On			
Key Out Setting	1 / Time						Off	Off	Off
	4 / Time						Off	Off	On
	5 / Time						Off	On	Off
	15 / Time						Off	On	On
	25 / Time						On	Off	Off
	75 / Time						On	Off	On
	100/ Time						On	On	Off
	500/ Time						On	On	On

CONNECTOR (*Magical Jack Plus / USA*)

36 PIN	COMPONENT SIDE A	SOLDER SIDE B	36 PIN
1	Video Red	Video Green	1
2	Video Blue	Video SYNC	2
3	Speaker	Speaker GND	3
4-6			4-6
7	Ticket Out Button - On Panel		7
8	Ticket Notch - From Dispenser		8
9	Start		9
10	Small / Stop 2		10
11	Play		11
12	Take / Stop 3 / Hold		12
13	Double Up / Stop 1		13
14-15			14-15
16	Big / All Stop		16
17			17
18	Coin	Key In	18
19			19
20	Book	Test	20
21		Key Down	21
22			22
23	Meter : Coin		23
24	Meter : Key In		24
25-27			25-27
28	Meter : Key Down / Pay Out		28
29	Start Lamp		29
30	Small / Stop 2 Lamp		30
31	Play Lamp		31
32	Take / Stop 3 / Hold Lamp		32
33	Double / Stop 1 Lamp		33
34	Big / All Stop Lamp		34
35			35
36	GND	GND	36

10 PIN	COMPONENT SIDE A	SOLDER SIDE B	10 PIN
1-2	GND	GND	1-2
3-4	+5V	+5V	3-4
5	+12V	+12V	5
6			6
7	Ticket Dispenser Enable / HPSSR		7
8			8
9-10	GND	GND	9-10