

Olympic 5

V. 105US

1. DIP SWITCH SETTING

DIP SWITCH 1		1	2	3	4	5	6	7	8
Connection Type	JAMMA	OFF							
	36+10 PINS	ON							

2. SYSTEM SETUP (Push "RECORD" Key to select the following items)

CONTENTS	SETTING SELECTION	DEFAULT
MAX. PLAY	5, 10, 20, 40, 50, 100	100
MIN. PLAY	1, 5, 8, 10, 20, 40, 50	5
COIN		5
KEY IN RATE	1, 2, 4, 5, 10, 15, 20, 25, 40, 50, 60, 75, 80, 100,	1
KEY OUT RATE	200, 250, 400, 500, 1000	1
TICKET RATE		100
ODDS TABLE	YES, NO	YES
RECORD PASSWORD	YES, NO	NO
W-UP GAME	YES, NO	YES
DEMO MUSIC	YES, NO	YES
PAYOUT SELECT	HOPPER, TICKET	TICKET
PAYOUT MODE	NORMAL, AUTO	NORMAL
NON STOP	YES, NO	NO
SYMBOL	FRUIT, SPORT, BOTH	BOTH
SYSTEM LIMIT	YES, NO	YES
HAND COUNT	YES, NO	NO
SCORE BOX	YES, NO	NO
PLAY SCORE	YES, NO	NO
LANGUAGE	ENGLISH, SPANISH	ENGLISH
DEMO NAME	YES, NO	YES
GAME TICKET	1, 2, 3, 4, 5, 8, 10, CONTINUE	1

3. CHANCE ADJUSTMENT

ITEM	CONTENT	DEFAULT
MAIN GAME RATE	70%, 74%, 78%, 82%, 86%, 88%, 92%, 96%, 100%, 104%, 108%	82%
W-UP GAME RATE	85%, 90%, 95%	90%

4. DEFAULT VALUE

ITEM	CONTENT
SYSTEM LIMIT	MAX BET X 400

Note: Use "BIG" button to switch between Fruit & Sport Symbols
Default Password: 8x "START" button

Connection Diagram for 36+10 Pins

PARTS SIDE		SOLDER SIDE
VIDEO - RED	1	VIDEO-GREEN
VIDEO - BLUE	2	VIDEO-SYNC
SPEAK	3	GND
	4	
	5	
	6	
TICKET OUT BUTTON	7	
TICKET SW.	8	
START TAKE ALL STOP	9	
SMALL STOP 3	10	
PLAY STOP 5	11	
TAKE STOP 1 ODDS TABLE	12	
DOUBLE UP STOP 4	13	
	14	
	15	
BIG STOP 2	16	
	17	
COIN A	18	KEY IN
	19	COIN C
BOOK	20	TEST
PAYOUT	21	KEYOUT
	22	HOPPER SW.
COIN A COUNTER	23	
KEY IN COUNTER	24	
	25	
COIN C COUNTER	26	
TICEKT OUT COUNTER	27	
KEYOUT COUNTER	28	
LAMP: START TAKE ALL STOP	29	
LAMP: SMALL STOP 3	30	
LAMP: PLAY STOP 5	31	
LAMP: TAKE STOP 1	32	
LAMP: DOUBLE UP STOP 4	33	
LAMP: BIG STOP 2	34	
	35	
GND	36	GND
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
	6	
HOPPER SWITCH SSR	7	
	8	
GND	9	GND
GND	10	GND
GND	10	GND