

ROYAL CLUB



Display mode : XVGA

BORDEN
TECHNOLOGY CORPORATION



INTRODUCTION

TABLE CHIPS	02
WINBET	02
BETTING AREAS	02
SPIN	07
BET TIMER	07
UNDO / REDO / CLEAN / REPEAT / DOUBLE	07

SYSTEM SET UP

MESSAGE REMOVAL	08
TEST / SET UP	08
FUNCTIONAL TESTING OF TOUCH-SCREEN PANEL	12
STATISTICS	13

WIRING DIAGRAM

WIRING DIAGRAM	15
CONTROL PANEL	16
PCB CONNECTOR PIN DIAGRAM	17
CC-TALK CONNECTOR PIN DIAGRAM	18

ROYAL CLUB

INTRODUCTION

1. TABLE CHIPS

Players can deal with the different denominations of table chips for betting.



2. WINBET

Players can place the last time winning credits as a winbet  on the outside bets area.

3. BETTING AREAS

Three betting categories – inside bets, outside bets, combination bets.





INSIDE BETS

An Inside bet is based upon betting on any of the numbers within the roulette table (from 0 to 36).

Straight up bet (Single Number bet):

a bet on a single number

35:1 payout



Split bet:

a bet on two adjacent numbers, placed on the line between the 2 numbers. Also can be made between 0 and 1, 0 and 2, or 0 and 3.

17:1 payout



Street bet

(a Three on a Row/Three Number bet):

a bet on any three numbers in a row on the roulette table.

11:1 payout



Corner

(Square bet / Four Number bet):

a bet on a block of four numbers on the roulette table.

8:1 payout



Four Number bet:

a bet on four numbers, comprising 0, 1, 2 and 3 on the roulette table.

8:1 payout



Line bet

(Six Number bet/Double street bet):

a bet on a group of six numbers on the roulette table, which covers two rows of three numbers.

5:1 payout



ROYAL CLUB

OUTSIDE BETS

An Outside bet is when you choose one of the betting options from outside area of the roulette table – i.e. red, black, 1st 12, EVEN, ODD.

Dozen bet: 2:1 payout

a bet on a group of 12 numbers, placed on the 1st 12 box (numbers 1-12), 2nd 12 box (number 13-24), or 3rd 12 box (number 25-36).



Column bet: 2:1 payout

1st Column: 1, 4, 7, 10, 13, 16, 19, 22, 25, 28, 31, 34 / 2nd Column: 2, 5, 8, 11, 14, 17, 20, 23, 26, 29, 32, 35 / 3rd Column: 3, 6, 9, 12, 15, 18, 21, 24, 27, 30, 33, 36.



Low/High Number bet: 1:1 payout

a bet on all low numbers, placed on the low box (number 1-18) / a bet on all high numbers, placed on the high box (number 19-36).



Even/Odd bet: 1:1 payout

a bet on all even numbers or all odd numbers, placed on the even box (all even numbers) or the odd box (all odd numbers).



Red/Black bet: 1:1 payout

a bet on all red numbers (1, 3, 5, 7, 9, 12, 14, 16, 18, 19, 21, 23, 25, 27, 30, 32, 34, 36) or on all black numbers (2, 4, 6, 8, 10, 11, 13, 15, 17, 20, 22, 24, 26, 28, 29, 31, 33, 35).





COMBINATION BETS

To press “CALLBETS” button to approach the Combination Bets Area, and it will provide five combinations of betting.

ROYAL CLUB

*Combination Bets To press “CALLBETS” button to approach the Combination Bets Area, and it will provide five combinations of betting.

1. Voisins du Zero (Neighbors of Zero):

Chips	Spaces
2	0 - 2 - 3 (Corner)
1	4 - 7 (Split)
1	12 - 15 (Split)
1	18 - 21 (Split)
1	19 - 22 (Split)
2	25 - 28 - 26 - 29 (Corner)
1	32 - 35 (Split)

2. Zero (Jeu Zero bet):

Chips	Spaces
1	0 - 3 (Split)
1	12 - 15 (Split)
1	26 (Single)
1	32 - 35 (Split)

3. Tier (The Third):

Chips	Spaces
1	5 - 8 (Split)
1	10 - 11 (Split)
1	13 - 16 (Split)
1	23 - 24 (Split)
1	27 - 30 (Split)
1	33 - 36 (Split)

4. Orphelins (Orphans):

Chips	Spaces
1	5 - 8 (Split)
1	10 - 11 (Split)
1	13 - 16 (Split)
1	23 - 24 (Split)
1	27 - 30 (Split)
1	33 - 36 (Split)

5. Neighbor :

Spaces

In the Combination Bets Area, to press one number and it will be backed along with the 2 numbers on either side of it in a 5 piece bet.

PAGE DOWN EXIT

Voisins du Zero (Neighbors of Zero)

Chips	Spaces
2	0 - 2 - 3 (Corner)
1	4 - 7 (Split)
1	12 - 15 (Split)
1	18 - 21 (Split)
1	18 - 22 (Split)
2	25 - 26 - 28 - 29 (Corner)
1	32 - 35 (Split)



Zero (Jeu Zero bet)

Chips	Spaces
1	0 \ 3 (Split)
1	12 \ 15 (Split)
1	26 (Single)
1	32 \ 35 (Split)

Tier (The Third)

Chips	Spaces
1	5 \ 8 (Split)
1	10 \ 11 (Split)
1	13 \ 16 (Split)
1	23 \ 24 (Split)
1	27 \ 30 (Split)
1	33 \ 36 (Split)

Orphelins (Orphans)

Chips	Spaces
1	1 (Single)
1	6 \ 9 (Split)
1	14 \ 17 (Split)
1	17 \ 20 (Split)
1	31 \ 34 (Split)

Neighbor

In the Combination Bets Area, to press one number and it will be backed along with the 2 numbers on either side of it in a 5 piece bet.



4.SPIN

After placing bets, to press “SPIN” button or to wait for a second until result comes.

5.BET TIMER

After pressing “SPIN” button, the Bet Timer will count down. Players will have six seconds to place more bets or remove bets until system announces no more bets.

6.UNDO / REDO / CLEAN / REPEAT/ DOUBLE

If you want to undo your most recent action, press the **UNDO** button. To press **REDO** button to redo the previous bet. Press the **CLEAR** button If you want to clear the board of all your chips and place your bets again.

Repeat your previous bet(s) by pressing the **REPEAT** button, and the game will set up your chips to match your previous bet. Please note that all winning stakes automatically stay on the table. Once you have pressed repeat the button will change to **DOUBLE**, which will double the stakes of all the chips on the table.





SYSTEM SET UP

ERROR MESSAGE REMOVAL

Please remove the advised messages by following direction:

Messages	Way to Remove the Message
CREDIT LIMIT	REBOOT AND MODIFY THE CREDIT LIMIT RANGE OR PRESS KEYOUT BUTTON .
TICKET EMPTY	PLEASE RESET COMPUTER TO REBOOT AND CLEAR THE ERROR MESSAGE.
HOPPER EMPTY	PLEASE RESET COMPUTER TO REBOOT AND CLEAR THE ERROR MESSAGE.
CCTALK- HOPPER1 ERROR	PLEASE RESET COMPUTER TO REBOOT AND CLEAR THE ERROR MESSAGE.
CCTALK- HOPPER2 ERROR	PLEASE RESET COMPUTER TO REBOOT AND CLEAR THE ERROR MESSAGE.

© Before pressing KEYOUT button to clear the error message, please remember to record the original credit first.

TEST/SET UP

Press [SETUP] button when power is ON to enter TEST/SETUP screen. Please enter the owner password to access this page.

SETUP
1.LAST EVENT RECORD
2.IN/OUT SETUP
3.FUNCTION SETUP
4.PASSWORD SETUP
5.RELOAD DEFAULT
6.EVENT RECORD
7.TEST
8.CLEAR ALL EVENTS & STATISTICS
【CALL BETS】 : UP 【UNDO】 : DOWN 【SPIN】 : ENTER 【HELP】 : EXIT



SYSTEM SET UP

1.LAST EVENT RECORD

THE LAST TIME TO ...

RELOAD DEFAULT
 CHANGE IN/OUT SETUP
 CHANGE PAYOUT RATE
 CHANGE FUNCTION SETUP
 OPEN FRONT DOOR
 OPEN REAR DOOR
 POWER ON
 CLEAR THE LAST STATISTICS RECORDS
 CLEAR THE STATISTICS RECORDS
 TIME SETUP

【 HELP 】 : EXIT

★2.IN / OUT SET

COIN 1 KEYIN RATE

COIN 2 KEYIN RATE

COIN 3 KEYIN RATE

COIN RATE : 1000 、 500 、 200 、 100 、 50 、 20 、 10 、 5 、 2 、 1 、 OFF

KEY IN

NOTE RATE : 10000 、 5000 、 2000 、 1000 、 500 、 200 、 100 、 50 、 20 、 10 、 5 、 2 、 1 、 OFF

KEY OUT

10000 、 5000 、 2000 、 1000 、 500 、 200 、 100 、 50 、 20 、 10 、 5 、 2 、 1 、 OFF

PAY OUT 1

PAY OUT 2

10000 、 5000 、 2000 、 1000 、 500 、 200 、 100 、 50 、 20 、 10 、 5 、 2 、 1 、 OFF

BILL

10000 、 5000 、 2000 、 1000 、 500 、 200 、 100 、 50 、 20 、 10 、 5 、 2 、 1 、 OFF

BILL INHIBIT

HIGHT 、 LOW

PAYOUT OPTION

PAY OUT OPTION : TICKET DISPENSOR 、 HOPPER 、 CC-TALK HOPPER

COIN ACCEPTER	
CURRENCY	PATH
0.5 €	1、2、3
1 €	1、2、3
2 €	1、2、3

HOPPER	
DEVICE	DEVICE
HOPPER1	0.5、1 €
HOPPER2	0.5、1 €
CASH BOX	2 €

【 CALL BETS 】 : UP 【 UNDO 】 : DOWN 【 REDO 】 : + 【 CLEAN 】 : - 【 SPIN 】 : EXIT

★ TO ENTER THE PAGE, A PASSWORD IS REQUIRED.

◎ INCORRECT PASSWORD FOR THREE TIMES CONSTANTLY, PLEASE WAIT FOR 30 MINUTES TO ENTER ANOTHER PASSWORD.



SYSTEM SET UP

3.FUNCTION SETUP			
WIN BET LIMIT			
20000 、 15000 、 12000 、 10000 、 9000 、 8000 、 7000 、 6000 、 5000 、 4000 、 3000 、 2000 、 OFF			
WIN BET			
ON 、 OFF			
CREDIT LIMIT			
1000000 、 800000 、 600000 、 500000 、 300000 、 200000 、 100000 、 50000 、 OFF			
ROUND TIME			
90 、 80 、 70 、 60 、 50 、 40 、 30 、 20 、 10 、 OFF / SEC			
TIME SETUP			
2000 ~ 2099 / 1 ~ 2 / 1 ~ 30 / 0 ~ 23 : 1 ~ 59			
VOLUME ADJUSTMENT			
0 ~ 31			
GAME RATE			
90% ~ 100%			
MINIMUM BET /Only on the Red/Black, Odd/Even and High/Low betting area.			
OFF 、 0.5 、 1 、 5 、 10 、 50 、 100 、 500			
STRAIGHT UP MAXBET			
500 、 300 、 200 、 100 、 50			
	MAXBET		MAXBET
STRAIGHT UP BET	500 、 300 、 200 、 100 、 50	DOZEN BET	3500 、 2100 、 1400 、 700 、 350
SPLIT BET	1000 、 600 、 400 、 200 、 100	COLUMN BET	3500 、 2100 、 1400 、 700 、 350
STREET BET	1800 、 900 、 600 、 300 、 150	RED/BLACK BET	4000 、 2400 、 1600 、 800 、 400
CORNER	2000 、 1200 、 800 、 400 、 200	EVEN/ODD BET	4000 、 2400 、 1600 、 800 、 400
FIVE NUMBER BET	2000 、 1200 、 800 、 400 、 200	LOW/HIGH NUMBER BET	4000 、 2400 、 1600 、 800 、 400
LINE BET	3000 、 1800 、 1200 、 600 、 300		
【CALL BETS】 : UP 【UNDO】 : DOWN 【REPEAT】 : LEFT 【SPIN】 : RIGHT 【REDO】 : + 【CLEAN】 : - 【SPIN】 : EXIT			
★TO ENTER THE PAGE, A PASSWORD IS REQUIRED.			
©INCORRECT PASSWORD FOR THREE TIMES CONSTANTLY, PLEASE RESET COMPUTER TO ENTER LOGIN PASSWORD AGAIN.			



SYSTEM SET UP

4.PASSWORD SETUP

OWNER PASSWORD:ON/OFF

(On setup page, to use owner's login password or not.)

CHANGE THE OWNER PASSWORD

(On default page, to use employee's login password or not.)

EMPLOYEE PASSWORD:ON/OFF

CHANGE THE EMPLOYEE PASSWORD

DEFAULT OWNER PASSWORD:0000

DEFAULT EMPLOYEE PASSWORD:1111

【CALL BETS】:UP 【UNDO】:DOWN 【SPIN】:ENTER 【HELP】:EXIT

5.RELOAD DEFAVLT

IF YOU WANT RELOAD THE DEFAULT,PLEASE PRESS  FOR 5 SECONDS.

【HELP】:EXIT

6.EVENT RECORD

SYSTEM EVENT RECORD

IN/OUT METER EVENT RECORD

WIN EVENT RECORD

【CALL BETS】:LAST PAGE 【UNDO】:NEXT PAGE 【HELP】:EXIT

7.TEST

BUTTON TEST

PRESS TO CHECK
IF EACH BUTTON IS
ON AND MARK

PAYOUT

HELP

CALLBETS

UNDO

KEYIN

CLEAN

PEPEAT/DOUBLE

SPIN

SETUP

DOOR OPEN

KEYOUT

TOUCH CALIBRATION

RECORD

REDO

【HELP】:EXIT

SOUND TEST

SOUND TRACK 1

SOUND TRACK 2

SOUND TRACK 3

SOUND TRACK 4

【CALL BETS】:LAST PAGE 【UNDO】:NEXT PAGE 【HELP】:EXIT



SYSTEM SET UP

8.CASH IN/OUT DEVICE TEST																																			
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th colspan="2" style="text-align: center; padding: 2px;">GENERAL</th> </tr> </thead> <tbody> <tr><td colspan="2" style="text-align: center; padding: 2px;">IN</td></tr> <tr><td style="padding: 2px;">COIN ACCEPTOR</td><td></td></tr> <tr><td style="padding: 2px;">BILL ACCEPTOR</td><td></td></tr> <tr><td style="padding: 2px;">KEY IN</td><td></td></tr> <tr><td style="padding: 2px;">KEY OUT</td><td></td></tr> <tr><td colspan="2" style="text-align: center; padding: 2px;">OUT</td></tr> <tr><td style="padding: 2px;">HOPPER</td><td style="text-align: right; color: red; padding: 2px;">TEST</td></tr> <tr><td style="padding: 2px;">PRINTER</td><td style="text-align: right; color: red; padding: 2px;">TEST</td></tr> </tbody> </table>	GENERAL		IN		COIN ACCEPTOR		BILL ACCEPTOR		KEY IN		KEY OUT		OUT		HOPPER	TEST	PRINTER	TEST	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr style="background-color: #cccccc;"> <th colspan="2" style="text-align: center; padding: 2px;">CCTALK</th> </tr> </thead> <tbody> <tr><td colspan="2" style="text-align: center; padding: 2px;">IN</td></tr> <tr><td style="padding: 2px;">COIN ACCEPTOR 0.5 €</td><td></td></tr> <tr><td style="padding: 2px;">COIN ACCEPTOR 1.0 €</td><td></td></tr> <tr><td style="padding: 2px;">COIN ACCEPTOR 2.0 €</td><td></td></tr> <tr><td colspan="2" style="text-align: center; padding: 2px;">OUT</td></tr> <tr><td style="padding: 2px;">HOPPER1</td><td style="text-align: right; color: red; padding: 2px;">TEST</td></tr> <tr><td style="padding: 2px;">HOPPER2</td><td style="text-align: right; color: red; padding: 2px;">TEST</td></tr> </tbody> </table>	CCTALK		IN		COIN ACCEPTOR 0.5 €		COIN ACCEPTOR 1.0 €		COIN ACCEPTOR 2.0 €		OUT		HOPPER1	TEST	HOPPER2	TEST
GENERAL																																			
IN																																			
COIN ACCEPTOR																																			
BILL ACCEPTOR																																			
KEY IN																																			
KEY OUT																																			
OUT																																			
HOPPER	TEST																																		
PRINTER	TEST																																		
CCTALK																																			
IN																																			
COIN ACCEPTOR 0.5 €																																			
COIN ACCEPTOR 1.0 €																																			
COIN ACCEPTOR 2.0 €																																			
OUT																																			
HOPPER1	TEST																																		
HOPPER2	TEST																																		
【CALL BETS】 : LAST PAGE 【UNDO】 : NEXT PAGE 【HELP】 :EXIT																																			

Functional Testing of Touch-screen Panel

- 1.To press [SETUP] button for 3 seconds.
- 2.To press the four corner circles precisely.
 (The more precise you press the four corners, the more accurate it will be.)
- 3.To press [HELP] button to move off.



STATISTICS

Press the [RECORD] button when the power is ON to enter RECORD screen.
Please enter the **employee password** to access this page.

STATISTICS 1

THE STATISTICS 1			
POWER ON			
COIN IN			
PAYOUT			
KEYIN			
KEYOUT			
TOTAL BET			
TOTAL WIN			
GAME TIMES			
WIN TIMES			
TOTAL "WINBET" BET			
TOTAL "WINBET" WIN			
PAYOUT PERCENTAGE	%		%
WIN PERCENTAGE	%		%

CALL BETS (LAST PAGE)

UNDO (NEXT PAGE)

CLEAN (CLEAN THE LAST STATISTICS)

HELP (EXIT)

STATISTICS 2

THE STATISTICS 2					
NUMBER	SCORE	PERCENTAGE	NUMBER	SCORE	PERCENTAGE THE NUMBER DISPLAY
0		0%	19		0%
1		0%	20		0%
2		0%	21		0%
3		0%	22		0%
4		0%	23		0%
5		0%	24		0%
6		0%	25		0%
7		0%	26		0%
8		0%	27		0%
9		0%	28		0%
10		0%	29		0%
11		0%	30		0%
12		0%	31		0%
13		0%	21		0%
14		0%	33		0%
15		0%	34		0%
16		0%	35		0%
17		0%	36		0%
18		0%			0%

LAST PAGE
CALL BETS

NEXT PAGE
UNDO

EXIT
HELP

CALL BETS (LAST PAGE)

UNDO (NEXT PAGE)

HELP (EXIT)



STATISTICS

STATISTICS 3

THE STATISTICS 3		
NUMBER	SCORE	PERCENTAGE THE NUMBER DISPLAY
RED		0%
BLACK		0%
0		0%
NUMBER	SCORE	PERCENTAGE THE NUMBER DISPLAY
1 to 18		0%
19 to 36		0%
0		0%
NUMBER	SCORE	PERCENTAGE THE NUMBER DISPLAY
ODD		0%
EVEN		0%
0		0%

CALL BETS (LAST PAGE)

UNDO (NEXT PAGE)

HELP (EXIT)



WIRING DIAGRAM

COMPONENT SIDE	36PIN	SOLDER SIDE
GND	1	GND
AUDIO OUT L(+)	2	SPEAKER (-)
AUDIO OUT R(+)	3	SPEAKER (-)
[CALL BETS] SWITCH	4	
[UNDO] SWITCH	5	
[REDO] SWITCH	6	
[CLEAN] SWITCH	7	
HOPPER FULL SENSOR	8	
[SPIN] SWITCH	9	
[REPEAT] SWITCH	10	
TOUCH SCREEN CALIBRATE SWITCH	11	
	12	
[HELP] SWITCH	13	
	14	
	15	
BACK DOOR SWITCH	16	
FRONT DOOR SWITCH	17	
COIN IN SWITCH	18	KEY IN SWITCH
	19	BILL ACCEPTER
ACCOUNT SWITCH	20	SET UP SWITCH
[PAY OUT] SWITCH	21	KEY OUT SWITCH
	22	HOPPER SWITCH
	23	BILL INHIBIT
KEY IN COUNTER	24	DIVERT
BILL IN COUNTER	25	ERROR LAMP
COIN IN COUNTER	26	
PAY OUT COUNTER	27	
KEY OUT COUNTER	28	
[SPIN] LAMP	29	[CALL BEST] LAMP
[REPEAT] LAMP	30	[UNDO] LAMP
[PAY OUT] LAMP	31	[REDO] LAMP
	32	[CLEAN] LAMP
[HELP] LAMP	33	
HOPPER SSR	34	
N.C.	35	N.C.
GND	36	GND



WIRING DIAGRAM

COMPONENT SIDE	10PIN	SOLDER SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
+24V for CC-TALK POWER	6	+24V for CC-TALK POWER
HOPPER SSR	7	HOPPER SSR
N.C.	8	N.C
GND	9	GND
GND	10	GND

CONTROL PANEL



ROYAL CLUB



Display mode : XVGA
Resolution : 1024X768
Formats : 4:3
Vertical Scan Freq. : 60Hz
Horizontal Scan Freq. : 48kHz

BORDEN
TECHNOLOGY CORPORATION

Game development and manufacturing

No.2, Lane 55, Wan shing St.,Kaohsiung 807, TAIWAN.R.O.C

T E L : +886-7-3852311 · FAX:+886-7-3836639

E - m a i l : sales@borden.com.tw

Web Site : www.borden.com.tw

