

# Tropical Fruit

V.105US

## 1. DIP SWITCH SETTING

DIP SWITCH 1		1	2	3	4	5	6	7	8
DEMO MUSIC	YES	OFF							
	NO	ON							
NON STOP	NO		OFF						
	YES		ON						
PASSWORD	YES			OFF					
	NO			ON					
ODDS TABLE	YES				OFF				
	NO				ON				
AUTO TAKE (W-UP DISSABLE)	NO					OFF			
	YES					ON			
W-UP GAME	YES						OFF		
	NO						ON		

DIP SWITCH 2		1	2	3	4	5	6	7	8
CHANCE LEVEL	HIGH	ON							
	LOW	OFF							
SCORE BOX	NO		OFF	OFF					
	YES		ON	OFF					
	10X		OFF	ON					
PLAY SCORE	NO				OFF				
	YES				ON				
HAND COUNT	NO					OFF			
	YES					ON			
SYMBOL	FRUIT						OFF		
	FOOD						ON		
SKILL GAME	NO							OFF	
	YES							ON	
SKILL LEVEL	LOW								OFF
	HIGH								ON

Remark: for normal operation please set Chance Level on OFF (low) & ON (high) for Casino  
Default Password to System Setup : [Start] \* 8

## 2. System Setup ( Push "RECORD" Key to select the following items)

CONTENTS	SETTING SELECTION	DEFAULT
MAX. PLAY	8,16,32,64,128	32
MIN. PLAY	1,8,16,24,32	8
SYSTEM LIMIT (Max. PLAY)	X500, X1000, X2000, X3000, NO LIMIT	NO LIMIT
COIN RATE		5
KEY IN RATE	1, 2, 4, 5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 80, 100, 200, 250,	100
KEY OUT RATE	400, 500, 1000	1
TICKET RATE		20
GAME TICKET	1, 2, 3, 4, 5, 8, 10, CONTINUOUS	CONTINUOUS
CREDIT LIMIT	1000, 5000, 10000, 90000	10000
TICKET OUT	PRINT DIRECT/DISPENSER DIRECT	DISPENSER DIRECT
PRINTER COMMAND	CBM1 · ESC/POS · STAR	CBM1

REMARK: Printer only can be used one by one machine

CHANCE ADJUSTMENT		
MAIN GAME RATE	LEVEL 1(95%) , LEVEL 2(94%) , LEVEL 3(93%) , LEVEL 4(92%) LEVEL 5(91%) , LEVEL 6(90%) , LEVEL 7(89%) , LEVEL 8(88%)	LEVEL 4
W-UP GAME RATE	LEVEL 1(98%) , LEVEL 2(96%) , LEVEL 3(94%) , LEVEL 4(92%)	LEVEL 2



Connection Diagram for 36+10 Pins	
PARTS SIDE	SOLDER SIDE
VIDEO RED	1 VIDEO GREEN
VIDEO BLUE	2 VIDEO SYNC
SPEAKER	3 VIDEO GND
	4
	5
	6
TICKET OUT	7
TICKET SWITCH	8
ALL STOP/START	9
SMALL / STOP2	10
PLAY	11
TAKE / STOP3	12
W-UP / STOP1	13
	14
	15
BIG	16
	17
COIN A	18 KEY IN
	19 COIN C
BOOK	20 TEST
	21 KEY OUT/PRINTER PRINT
	22
COIN A METER	23
KEY IN METER	24
	25
COIN C METER	26
OUT METER	27
	28
LAMP: ALL STOP/START	29
LAMP: SMALL / STOP2	30
LAMP: PLAY	31
LAMP: TAKE / STOP3	32
LAMP: W-UP / STOP1	33
LAMP: BIG	34
	35
GND	36 GND

PARTS SIDE	SOLDER SIDE
GND	1 GND
GND	2 GND
+5V	3 +5V
+5V	4 +5V
+12V	5 +12V
+12V	6 +12V
TICKET SSR	7
	8
	9
GND	10 GND