


# PARROT POKER III™ ©2003 AMCOE INC.

| PIN | PARTS SIDE                     | SOLDER SIDE                   | PIN |
|-----|--------------------------------|-------------------------------|-----|
| 1   | VIDEO RED                      | VIDEO GREEN                   | 1   |
| 2   | VIDEO BLUE                     | VIDEO SYNC                    | 2   |
| 3   | SPEAKER +                      | SPEAKER -                     | 3   |
| 4   | HOLD 1                         | HOLD 4                        | 4   |
| 5   | HOLD 2                         | HOLD 5                        | 5   |
| 6   | HOLD 3                         |                               | 6   |
| 7   | TICKET OUT BUTTON - panel      |                               | 7   |
| 8   | TICKET NOTCH - dispenser       |                               | 8   |
| 9   | <b>START / TAKE</b>            |                               | 9   |
| 10  | <b>HOLD 4 (SMALL)</b>          |                               | 10  |
| 11  | <b>PLAY / HOLD 1</b>           |                               | 11  |
| 12  | <b>HOLD 5 (TAKE)</b>           |                               | 12  |
| 13  | <b>HOLD 3 (DOUBLE)</b>         |                               | 13  |
| 14  |                                |                               | 14  |
| 15  |                                |                               | 15  |
| 16  | <b>HOLD 2 (BIG)</b>            |                               | 16  |
| 17  |                                |                               | 17  |
| 18  | COIN IN                        | NOTE IN                       | 18  |
| 19  | SERVICE IN                     |                               | 19  |
| 20  | ACCOUNT / PRINTER SET UP       | CONFIRM / MONITOR SET UP      | 20  |
| 21  | HOPPER PAYOUT - panel          | CLEAR / PRINTER PRINT - panel | 21  |
| 22  |                                | *HOPPER SWITCH - hopper       | 22  |
| 23  | COIN IN METER                  |                               | 23  |
| 24  | NOTE IN METER                  |                               | 24  |
| 25  |                                |                               | 25  |
| 26  |                                |                               | 26  |
| 27  | HOPPER METER                   |                               | 27  |
| 28  | CLEAR / TICKET / PRINTER METER |                               | 28  |
| 29  | <b>START / TAKE LAMP</b>       | HOLD 5 LAMP                   | 29  |
| 30  | <b>HOLD 4 (SMALL) LAMP</b>     | HOLD 1 LAMP                   | 30  |
| 31  | <b>PLAY / HOLD 1 LAMP</b>      | HOLD 2 LAMP                   | 31  |
| 32  | <b>HOLD 5 (TAKE) LAMP</b>      | HOLD 3 LAMP                   | 32  |
| 33  | <b>HOLD 3 (DOUBLE) LAMP</b>    | HOLD 4 LAMP                   | 33  |
| 34  | <b>HOLD 2 (BIG) LAMP</b>       |                               | 34  |
| 35  |                                |                               | 35  |
| 36  | GND                            | GND                           | 36  |

| PIN | PARTS SIDE              | SOLDER SIDE | PIN |
|-----|-------------------------|-------------|-----|
| 1   | GND                     | GND         | 1   |
| 2   | GND                     | GND         | 2   |
| 3   | +5V                     | +5V         | 3   |
| 4   | +5V                     | +5V         | 4   |
| 5   | +12V                    | +12V        | 5   |
| 6   | +12V                    | +12V        | 6   |
| 7   | TICKET DISPENSER ENABLE |             | 7   |
| 8   | HOPPER SSR              |             | 8   |
| 9   | GND                     | GND         | 9   |
| 10  | GND                     | GND         | 10  |

\* HOPPER SWITCH - auto detect normal low (mostly micro switch type) or normal high (mostly sensor type)

# PARROT POKER III™ ©2003 AMCOE INC.

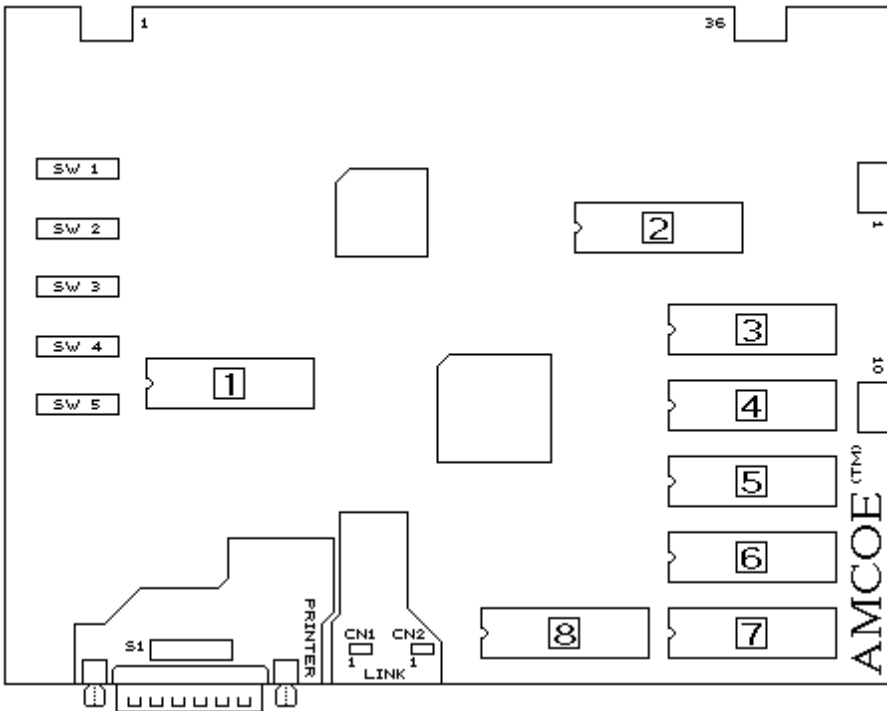


## New S2000 board

The new S2000 board is a powerful platform designed to give sophisticated performance, special visual effects, finer resolutions, communication capabilities, and to make it a more cost effective investment.

There are 3 communication ports on the board. The RS232C is primarily used to drive printer to print tickets without any interface. It can also be used to download / upload data and instructions from / to PC. The other 2 communication ports (CN1 and CN2) are mainly for linking with other S2000 boards (and to central console with modem, if required). Application such as linking progressive bonus of all the machines together to display on screen in real time can be done efficiently. (SEE MANUAL OF LINKING)

To drive a printer to print ticket, simply connect with a 25 pin one-to-one cable to the serial port of the printer. Printer ticket set up can be done on screen (or download from PC - SEE MANUAL OF PC DOWNLOAD). Go to Account Screen and follow instructions. The following printer settings have to be adjusted on the printer: BAUD RATE = 9600, WORD LENGTH = 8 BITS, PARITY = NO.

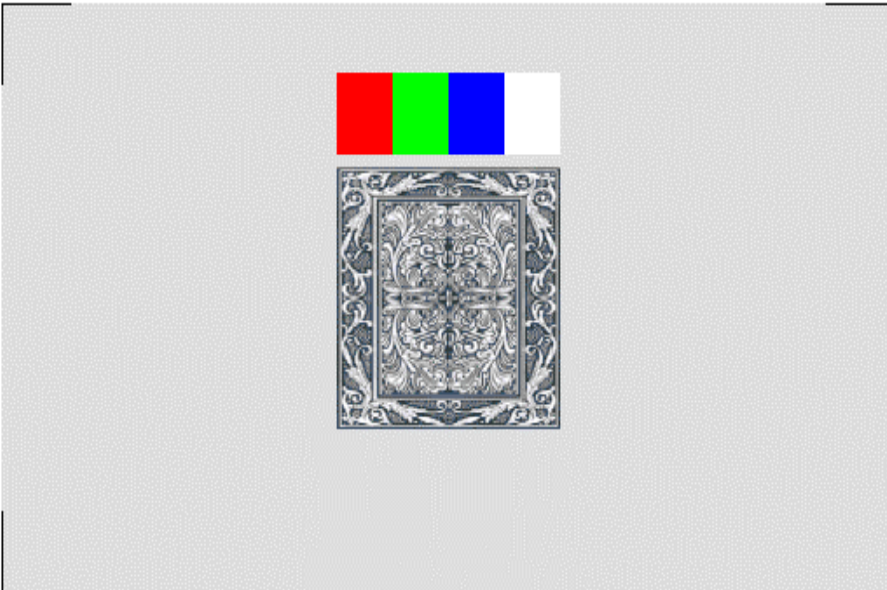

## MONITOR ADJUSTMENT

The resolutions of S2000 are 33.3% more than that of New Cherry '96. Sync, V-size, V-pos, H-pos,...etc. may have to be adjusted. After reset or existing Confirm Screen, a test screen (as left) will come up.

1/ Dip SW 5 # 1 - "OFF" Korean made (most USA brands) monitor; "ON" Taiwanese made.

2/ Adjust Sync to get a stable picture.

3/ Adjust V-size, V-pos, H-size, and H-pos such that all 4 white corner brackets (right-angle shape) can be seen and are a little bit away from the curving edges of monitor.

4/ Adjust color purity. Most monitors may look fine without further adjusting colors, but a re-adjustment will make sure true color representations, not only for the S2000 board but for all other games.

There are 4 color bands, a gray & white card, and 4 white corner brackets. The 4 color bands are (pure) red, green, blue, and white. Turn brightness on until background is no longer "black" and turn RGB to the lowest. Turn G up until flare comes out (like a shadow going outside the edge) on white; then, reduce gradually until the flare "just" disappears. Do the same thing with R and B one by one. Lastly, reduce brightness until background is "black".

**PARROT POKER III™ ©2003 AMCOE INC.**

| DIP SW 5   |  | 1         | 2                             | 3   | 4   | 5   | 6                      | 7                      | 8   |
|--|--|-----------|-------------------------------|-----|-----|-----|------------------------|------------------------|-----|
| MONITOR TYPE   | KOREAN MADE<br>TAIWANESE MADE  | OFF<br>ON | for most monitors used in USA |     |     |     |                        |                        |     |
| UNIT ID SETUP FOR<br>PROGRESSIVE LINK BONUS<br>(Control board and link cables<br>required. Program must be Link<br>Version.) | NO LINK  |           | OFF                           | OFF | OFF | OFF |                        |                        |     |
|  | UNIT 1   |           | ON                            | OFF | OFF | OFF |                        |                        |     |
|  | UNIT 2   |           | OFF                           | ON  | OFF | OFF |                        |                        |     |
|  | UNIT 3   |           | ON                            | ON  | OFF | OFF |                        |                        |     |
|  | UNIT 4   |           | OFF                           | OFF | ON  | OFF |                        |                        |     |
|  | UNIT 5   |           | ON                            | OFF | ON  | OFF |                        |                        |     |
|  | UNIT 6   |           | OFF                           | ON  | ON  | OFF |                        |                        |     |
|  | UNIT 7   |           | ON                            | ON  | ON  | OFF |                        |                        |     |
|  | UNIT 8   |           | OFF                           | OFF | OFF | ON  |                        |                        |     |
|  | UNIT 9   |           | ON                            | OFF | OFF | ON  |                        |                        |     |
|  | UNIT 10  |           | OFF                           | ON  | OFF | ON  |                        |                        |     |
|  | UNIT 11  |           | ON                            | ON  | OFF | ON  |                        |                        |     |
|  | UNIT 12  |           | OFF                           | OFF | ON  | ON  |                        |                        |     |
|  | UNIT 13  |           | ON                            | OFF | ON  | ON  |                        |                        |     |
|  | UNIT 14  |           | OFF                           | ON  | ON  | ON  |                        |                        |     |
| UNIT 15  |  | ON        | ON                            | ON  | ON  |     |                        |                        |     |
| RESET DEFAULT  | Coin=1, Clear Unit=1<br>Coin=5, Clear Unit=20<br>Coin=5, Clear Unit=100<br>Coin=25, Clear Unit=100 |           |                               |     |     |     | OFF<br>ON<br>OFF<br>ON | OFF<br>OFF<br>ON<br>ON |     |
| NO USE   | MUST BE  |           |                               |     |     |     |                        |                        | OFF |

All selections are made on screen or by PC DOWNLOAD except those listed in Dip SW 5. Please go to Confirm Screen and following on screen instructions to adjust available selections. Different versions may have different available selections and selectable ranges. Whenever the S2000 board is reset by toggle switch, default settings will be loaded. Check Confirm Screen and make necessary adjustment to suit your operation.

Selections which can be adjusted on screen (**NOT** for all versions) are as follow:

**EST OUT RATE:** Adjustable Estimated Out Rate is 71,73,75,77,79,81,83, or 85. (Default is 75.)

**COIN IN TO POINT:** It relates to 36 pin edge connector part side 18. 1 pulse in = ?

**NOTE IN TO POINT:** It relates to 36 pin edge connector solder side 18. 1 pulse in = ?

**COIN IN LIMIT:** Set the COIN IN limit.

**MIN PLAY TO START:** Min point(s) required to start to play a game.

**MIN PLAY FOR BONUS:** Min points required in order to get bonus features.

**MAX PLAY:** Max points which can be played in a game.

**CLEAR / TICKET UNIT:** It relates to 36 pin edge connector part side 28. Each pulse out = ? Point(s).

**TICKET OUT MODE:** It relates to above and regulates max ? pulse(s) out each game. Continuous = no limit.

**USE SCORE:** If yes, "SCORE" will appear on screen. All points won will be collected to "SCORE". Default = NO.

**SCORE OUT:** Manual (default) or Auto.

**TICKET OUT:** It can be Printer Direct\*, Ticket Dispenser Direct Drive (TDDD), or Interface.

**SHOW ACCOUNT:** YES or NO.

**LIMIT SCORE PER GAME:** Limit SCORE per game play to 10xplay or an equivalent of \$5 whichever is less.

**PLAY REMAIN SCORE:** Only when "SCORE" appears on screen. Play directly from "SCORE" when no point in POINT column.

**COUNT GAME:** This is an advanced count game feature counting eligible pulses out based on TICKET OUT MODE.

**PRINTER TYPE:** Use one central printer via Link Control Unit (VIA LINK) or individual printer installed in machine (USE SELF).

**PRINTER COMMAND:** CBM1 (Citizen) (default), ESC/POS (Epson), STAR emulation, Ithaca 70.

**USE PASSWORD:** NO (default), Service Only, Adjust Only, Service and Adjust.

**HOPPER UNIT USE:** Use COIN IN or CLEAR / TICKET UNIT as reference.

**HOLD BUTTONS:** SHARE BUTTON or EXTRA BUTTON. See connection diagram. Extra buttons are in blue color.

**START HAND:** JACKS OR BETTER or TWO PAIRS.

**AUTO HOLD:** PATRIAL or FULL.


**DOUBLE GAME:** YES or NO.

**NO DOUBLE IF MAIN WIN >:** Do not allow double if main game win points greater than how many points. No limit after going into double game.

\* When using Printer Direct, please go to Account Screen then Printer Ticket Set Up. Remember to do Printer Ticket Set Up again after reset of board!

**IMPORTANT:** In order to be able to change selections, you must enter a valid password first. Otherwise, you can only view current selections. Obtain your Access Password from your supplier.

# PARROT POKER III™ ©2003 AMCOE INC.

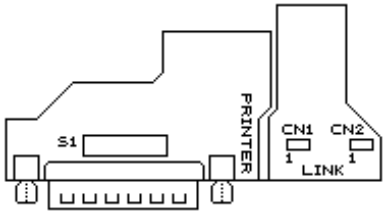

|                 | RS232C         | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   |
|-----------------|----------------|-----|-----|-----|-----|-----|-----|-----|-----|
| Model S2000     | PRINTER PORT & | OFF | OFF | ON  | OFF | OFF | ON  | OFF | OFF |
| Model S2000 A/B | PC DOWNLOAD    | OFF | ON  | OFF | ON  | OFF | OFF | OFF | OFF |

\*PRINTER: BAUD RATE = 9600, WORD LENGTH = 8 BITS, PARITY = NO.  
 (Dip SW settings of Citizen iDP3540/3541 = DS1 # 1,8 ON; DS2 # 2,5,6,7 ON)  
 (The alarm light of 3550/3551 has to be ON all the time in order to print. With above settings and program version 2.0~, 3540/3541/3550/3551 alarm light can be ON all the time)  
 In Printer Ticket Set Up, there are 3 entries which need to be done carefully. (Others are mainly text messages.)

**POINT VALUE:** It is the \$ value of each point. Immediately after reset, program will detect coin in setting and use the following COIN MODE table to assign the \$ value of each point. It can be changed If not using LIMIT SCORE.

**TICKET LIMIT:** Default is \$00.00, meaning no limit. The maximum \$ value of a single ticket can be limited from \$1 to \$99. (CAUTION: do not set TICKET LIMIT-except \$00.00-less than POINT VALUE.)

**PRINT \$ OR POINT ON TICKET:** Select between DOLLAR or POINTS (default).


**Adjust Ticket Setting and Game Setting by PC DOWNLOAD**

S2000 PC DOWNLOAD PROGRAM is distributed FREE. It runs on PC with Windows 95/98. You may obtain a free copy on a 3.5" disk or by downloading it from the internet\*. A HELP file will come up the first time you use it after installation. You will find all necessary information on how to adjust BOTH Ticket Setting and Game Setting of your board by PC. PC Download Program will be especially useful in printer ticket set up. Typing name, address, machine number....etc. will be much faster on a computer than through on screen input. On your S2000 board, go to Account Screen and press <DOUBLE> to go to PC download mode. Also, remember to set Dip SW S1 (near RS232C port) of your board to PC download mode during PC download. Press <TAKE> to exit PC download mode.


\* <http://www.amcoe.com>

| COIN MODE      | COIN IN SETTING | BILL ACCEPTOR SELECTION |                | \$1 = ? POINTS | LIMIT SCORE        |
|----------------|-----------------|-------------------------|----------------|----------------|--------------------|
|                |                 | \$1 = 1 PULSE           | \$1 = 4 PULSES |                | MAX \$5 = ? POINTS |
| \$1 = 1 PT.    | 1               | YES                     |                | 1              | DO NOT USE         |
| \$0.50 = 1 PT. | 2               | YES                     |                | 2              | 10                 |
| \$0.25 = 1 PT. | 1               |                         | YES            | 4              | 20                 |
|                | 4               | YES                     |                |                |                    |
| \$0.10 = 1 PT. | 10              | YES                     |                | 10             | 50                 |
|                | 5               |                         | YES            |                |                    |
| \$0.05 = 1 PT. | 20              | YES                     |                | 20             | 100                |
|                | 25              |                         | YES            |                |                    |
| \$0.01 = 1 PT. | 100             | YES                     |                | 100            | 500                |
|                |                 |                         | YES            |                |                    |

**Ticket Dispenser Connection Diagram**

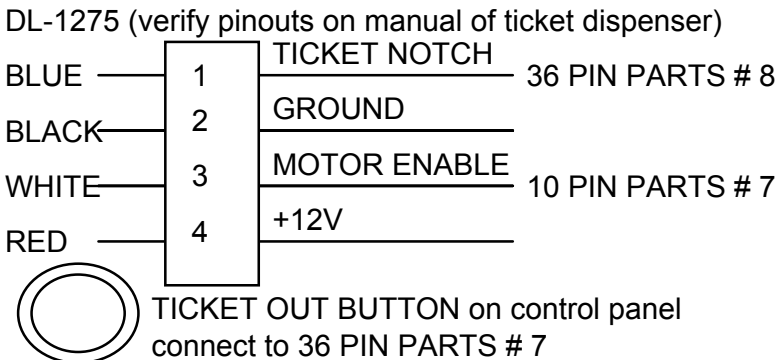

**Hopper Connection Diagram**

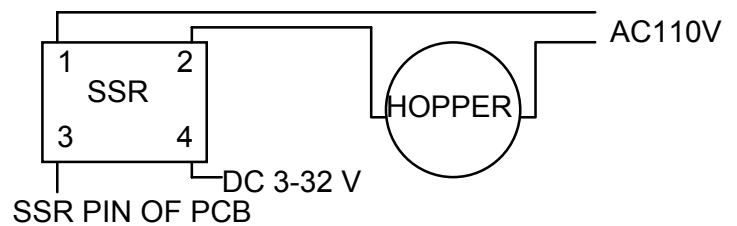

# PARROT POKER III™ ©2003 AMCOE INC.

## **Game Feature**

Parrot Poker is a simple five cards draw poker. There is a Double Game. Player can raise double points (from credit) up to twice of original double points when entering the double game. Full House hand gets extra Bonus Games. This game is designed to be a simple and quick action poker game. Since it is simple, to make it attractive, most of the effort in programming is devoted to the performance and feel of playing. Also, graphics and visual effects are carefully tailored. The Bonus Game is one that the player can find out the outcome.

## **Link Bonus**


You can link together with other S2000 games to create a big progressive bonus. A control unit and link cables are required. For detail, please read manual of Linking. Basically, it is very simple, convenient, and cost effective. Four Aces (not 4 of a kind with Joker) hand is reserved as Link Bonus. Link Bonus Point will appear on screen when linking. The adjustment of the base, max, and rate of Link Bonus is done in the control unit. All you need on your PARROT POKER board is to set Unit ID by Dip SW 5. First release already has RDFLCU (REQUEST DATA FROM LINK CONTROL UNIT) function. See manual of Link 1.9/2.1. It is recommended to use Link version 2.1.

## **SPECIAL FEATURE**



2 SPADE and 7 SPADE are also wild cards in Flush and Straight. These two wild cards are distinguished by a parrot on it. There is also one JOKER which acts as any card and has the picture of a skull on it. Because of these three cards the mid section winning hands, such as THREE OF A KIND, STRAIGHT and FLUSH, are more than any other poker games.

# PARROT POKER III™ ©2003 AMCOE INC.

## PUSH BUTTON LEGEND

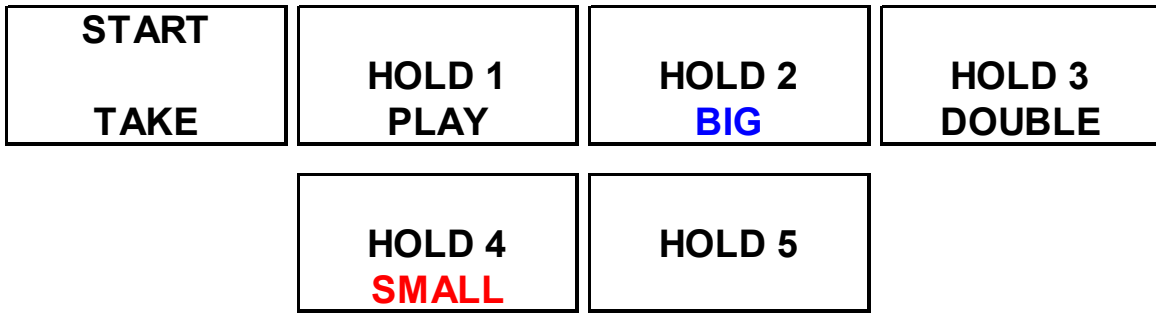

## SHARE BUTTON

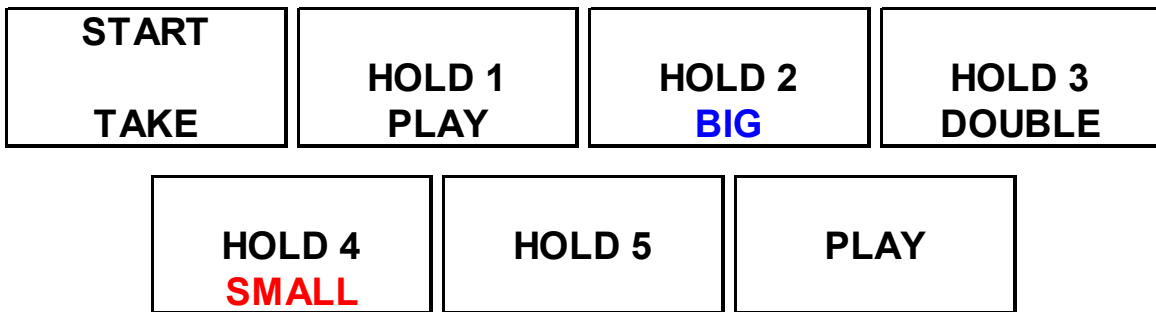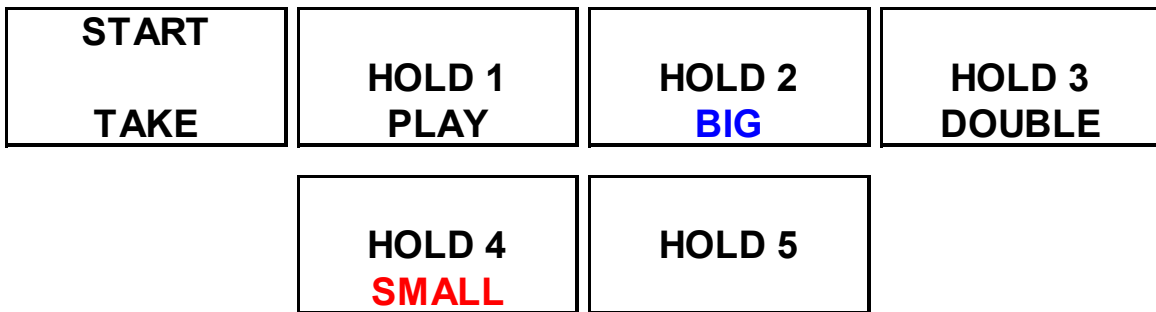

## EXTRA BUTTON

